

ELECTRICAL GAUGES W/WARNING

SMOKE LENS & ANGEL RING GAUGE SUPER WHITE LED DISPLAY

Air fuel / ratio

OPENING CEREMONY

<p>1</p> <p>BACK VIEW</p> <p>POWER WIRE HARNESS</p> <p>DAISY CHAIN</p> <p>POWER WIRE HARNESS (EITHER SIDE IS OK)</p> <p>RED - BATTERY (+). BLACK - ENGINE GROUND. WHITE - IGNITION SWITCH 12V+ ORANGE - DIMMER / +12V TO DIMMER CONNECT TO HEADLIGHT TO ACTIVATE.</p>	<p>2</p> <p>VISOR</p> <p>BUFFER</p> <p>METER</p> <p>METER CUP & HOLDER</p>	<p>3</p>	<p>4</p> <p>52MM</p>
<p>5</p> <p>+</p> <p>-</p>	<p>6</p> <p>**The warning is AFR lower Lean.</p> <p>CONNECTOR FOR SENSOR WIRE</p> <p>SENSOR WIRE</p> <p>RED CONNECTOR</p> <p>WHITE</p> <p>ECU (ENGINE COMPUTER UNIT)</p> <p>BACK VIEW</p>	<p>7</p> <p>+</p> <p>-</p>	

Boost / Vacuum Gauge

OPENING CEREMONY

<p>1</p> <p>BACK VIEW</p> <p>POWER WIRE HARNESS</p> <p>DAISY CHAIN</p> <p>POWER WIRE HARNESS (EITHER SIDE IS OK)</p> <p>RED - BATTERY (+). BLACK - ENGINE GROUND. WHITE - IGNITION SWITCH 12V+ ORANGE - DIMMER / +12V TO DIMMER CONNECT TO HEADLIGHT TO ACTIVATE.</p>	<p>2</p> <p>VISOR</p> <p>BUFFER</p> <p>METER</p> <p>METER CUP & HOLDER</p>	<p>3</p> <p>52MM</p>	<p>4</p> <p>52MM</p>
<p>5</p> <p>BOOST INSTALLATION</p> <p>Boost / Vacuum Sensor</p> <p>Surge Tank</p> <p>Pressure Regulator</p> <p>Boost Sensor</p> <p>Air Filter</p> <p>Hose</p> <p>Red White Black</p>	<p>6</p> <p>**The warning is boost exceed 1.5Bar(21Psi). **The warning is vacuum exceed 0 Bar(0 In.Hg).</p> <p>CONNECTOR FOR SENSOR WIRE</p> <p>SENSOR WIRE</p> <p>WHITE CONNECTOR</p> <p>BLACK</p> <p>WHITE</p> <p>VACUUM / BOOST SENSOR</p>	<p>7</p> <p>+</p> <p>-</p>	